

Change Menu Settings on the Sony HDW-1800 HDCAM

- **PRESS: P1** (HOME) BUTTON
- **PRESS: F9** (MENU) BUTTON
- USING MULTI-CONTROL DIAL, TURN CLOCKWISE TO SCROLL THROUGH MENU ITEMS
- AT DESIRED MENU ITEM, **PRESS F6** (SELECT) TO ACTIVATE
- **PRESS: F3** AND **F4** BUTTONS TO SCROLL THROUGH OPTIONS FOR THAT MENU ITEM
- **PRESS: F9** TO SET
- **PRESS: F10** TO EXIT

