

# Factory Reset on the Sony HDW-1800 HDCAM

- **PRESS: P1** (HOME) BUTTON
- **PRESS: F9** (MENU) BUTTON
- USING MULTI-CONTROL DIAL, SCROLL TO MENU ITEM **B 20** (RESET SETUP)
- **PRESS: F6** TO SELECT
- **PRESS: F3** AND **F4** BUTTONS TO SCROLL THROUGH OPTIONS AND SELECT **FACTORY SETTING**
- **PRESS: F9** TO SET
- **PRESS: F10** TO EXIT

