

Setting Time-Code

Sony HDW-1800 HDCAM

- **PRESS: P1 (HOME) BUTTON**
- **PRESS: P2 (TC) BUTTON**
- **MAKE SURE F1 (TCG SRC) IS SET TO INTERNAL**
- **MAKE SURE F2 (TCG MODE) IS SET TO PRESET**
- **PRESS: P1 (HOME) BUTTON**
- **MAKE SURE F8 (COUNTER) IS SET TO TC**
- **PRESS: F10 TO (TCG SET)**
- **USE F 1 AND F2 TO SELECT HOURS, MINUTES, SECONDS, FRAMES**
- **PRESS F3 & F4 TO SELECT TC NUMBER FOR EACH**
- **WHEN TC IS SELECTED, PRESS F9 TO SET**
- **PRESS: REC BUTTON TO CONFIRM TC IS SET CORRECTLY**

