

Changing Frequency on the Panasonic AJ-HD1700

- **PRESS: MENU** BUTTON TO SELECT SYSTEM
- WHILE HOLDING DOWN THE **F** BUTTON **PRESS F4** BUTTON,
- TURN ADJUST KNOB TO SYSTEM **MENU 25**
- PUSH THE ADJUST KNOB TO DESIRED FREQUENCY
- **PRESS THE ADJUST KNOB & PRESS F5 (SET)**
- FOLLOW PROMT ON SCREEN FOR DESIRED FREQUENCY