

Changing Time-Code on the Panasonic AJ-HD1700

- **PRESS: TC BUTTON**
- **ON THE (TCG MD) OPTION MAKE SURE IT IS @
AUTO OR PRESET**
- **PUSH THE ADJUST KNOB TO DESIRED
FREQUENCY**
- **PRESS THE ADJUST KNOB & PRESS F5 (SET)**
- **FOLLOW PROMT ON SCREEN FOR DESIRED
FREQUENCY**