

Setting the Time-Code on the Panasonic AJ-HD3700B D-5

- **Press: HOME**
- **PRESS: TC/CHR**
- **PRESS: F1 BUTTON (SOURCE) TO SELECT EXT OR INT**
- **PRESS: HOME BUTTON TO EXIT**
- **PRESS: THE UNMARKED BUTTON IN THE MIDDLE OF THE ARROW BUTTONS TWICE TO HIGHLIGHT THE FIRST NUMBER. THEN USING THE NUMBER BUTTONS, ENTER THE TIME-CODE**
- **PRESS: ENT BUTTON WHEN DONE.**