

Changing the frequency on the Sony HDW-F500 HDCAM

Using a pen, **carefully** press: **Maintenance Button 1x**. Holding down **SFT** Button, press: **F8** Button (Mainte Exec)

- **RELEASE SFT** Button
- **PRESS: F9** Button (OTHERS CHECK)
- **PRESS: F9** Button (SYSTEM MENU)
- **PRESS: F2** Button (SYSTEM FREQ)
- **PRESS: F9** Button (EXEC) **2x's** TO EXECUTE