

Changing the frequency on the Sony SRW-5500 & SRW-5800 HDCAM HDCAM-SR

- **PRESS: SFT & DIAG SIMULTANEOUSLY**
- **PRESS: SFT & F8 SIMULTANEOUSLY**
- **PRESS: SET BUTTON**
- **PRESS: F9 Button (OTHERS CHECK)**
- **PRESS: F9 (SYSTEM MENU) OPTIONS:**
 - *F1 (SYSTEMLINE): 1080, 720
 - *F2 (SYSTEMSCAN): INTERLACE, **PSF**, PROGRESSIVE
 - *F3 (SYSTEM FRAME): 23.98HZ, 24HZ, 25HZ, 29.97HZ, 30HZ, 50HZ, 59.94HZ
 - *F4 (SYSTEM SIGNAL): 422 YPBPR, 444
 - *F5 (RECORD FORMA): HDCAM SR, HDCAM, AUTO
 - *F6 (FRAME CONVERT): ENDLESS, EVERY SYSTEM POSSIBLE
 - *F7 (ACTIVE LINE): OFF, 1080, 1035
- **PRESS: F9 (EXEC) TWICE TO SAVE CHANGES & SET**