

# Setting Time-Code on the Sony HDW-F500 HDCAM

- **PRESS: HOME BUTTON**
- **PRESS: TC BUTTON. USING THE NUMBER BUTTONS, ENTER THE TIME-CODE. NOTE THAT THE TC NUMBER APPEAR ON THE TOP-RIGHT CORNER OF THE DISPLAY**
- **PRESS: SET BUTTON**
- **PRESS: F3 BUTTON (TIMER SET). MAKE SURE THAT **TIMER SEL** AND **TCR SOURCE** ARE SET TO **INT** (V/VITC or L/LONGITUDE)**