

Setting Time-Code on the Sony DVW-A500 Digital BetaCAM

Completely lift-up the **Front Control Panel** until it is perpendicular to the body of the deck. Then, carefully pull the **Front Control Panel** forward so that it exposes an additional set of buttons. Here you will find two (2) **TC Generator** switches -

- **SET ONE TC Generator switch to: INT**
- **SET THE OTHER TC Generator SWITCH TO: PRESET**

Underneath the **Front Control Panel**, set: **VITC; NON/DROP FRAME MODE** and **REC RUN** switches as required.

On the Front Control Panel –

- **PRESS: TC BUTTON**
- **PRESS: HOLD BUTTON**

The first digits will now begin to flash. Using the **Search Dial**, select the digit to change. While holding down the **JOG Button** (located on top of the **Search Dial**), rotate the **Search Dial** to change the value.

- **PRESS: SET BUTTON WHEN DONE.**

The **TIME-CODE** that you selected will appear on the **LED DISPLAY** on the **FRONT CONTROL PANEL** WHEN YOU HIT **Play** or **RECORD**.